
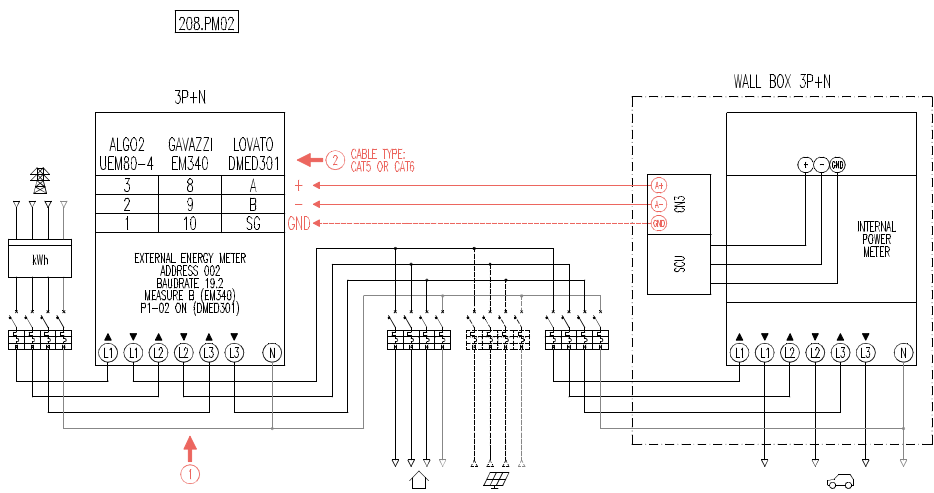


## ART. 208.PM01 - 208.PM02

Collegamento misuratore di energia aggiuntivo  
 Additional energy meter connection  
 Connexion de compteur d'énergie supplémentaire  
 Conexión de medidor de energía adicional


- <https://www.emobility-scame.com>
- Download: Manuale d'uso BE-T / BE-T User manual / Mode d'emploi BE-T / Manual de uso BE-T
- Download: Manuale d'uso BE-W[2.0] / BE-W[2.0] User manual / Mode d'emploi BE-W[2.0] / Manual de uso BE-W[2.0]

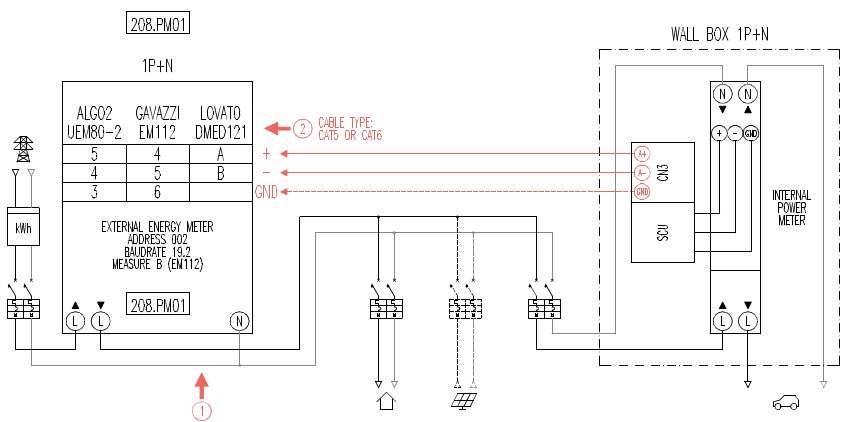

## ART. 208.PM01 - 208.PM02

### CONFIGURAZIONE / CONFIGURATION / CONFIGURATION / CONFIGURACIÓN

1) Stazioni con pulsante e display  
 Stations with button and display  
 Stations avec bouton et affichage  
 Estaciones con botón y pantalla

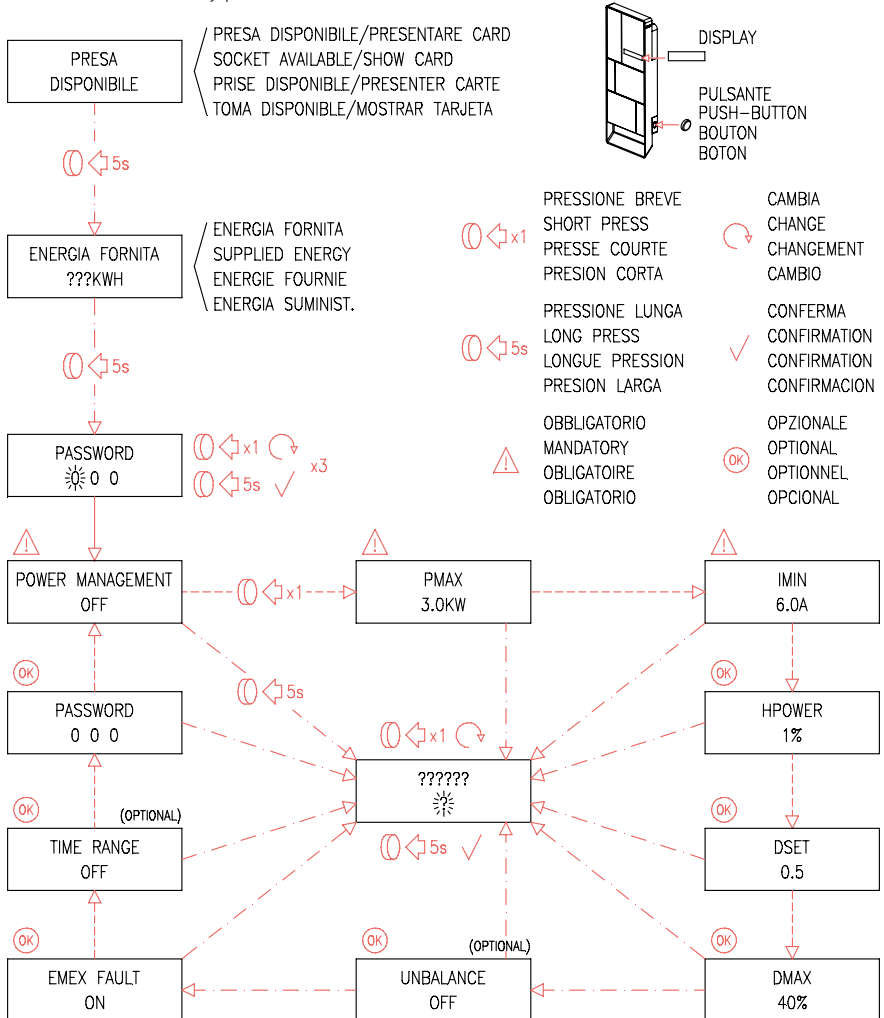

2) Stazioni con gestione APP  
 Stations with APP management  
 Stations avec gestion APP / Estaciones con gestión APP  
 Power management ON=tutorial APP

Numero Verde  
**800-018009**  
[www.scame.com](http://www.scame.com)  
[infotech@scame.com](mailto:infotech@scame.com)