

Cod. 208.PM01 - 208.PM02

Collegamento misuratore di energia aggiuntivo
Additional energy meter connection
Connexion de compteur d'énergie supplémentaire
Conexión de medidor de energía adicional

- <https://www.emobility-scene.com>



- Download:

Manuale d'uso BE-T / BE-T User manual / Mode d'emploi BE-T/ Manual de uso BE-T

Manuale d'uso BE-W[2.0] / BE-W[2.0] User manual / Mode d'emploi BE-W[2.0] / Manual de uso BE-W[2.0]


Manuale d'uso BE-R / BE-R User manual / Mode d'emploi BE-R / Manual de uso BE-R

BE-W[2.0] / BE-T

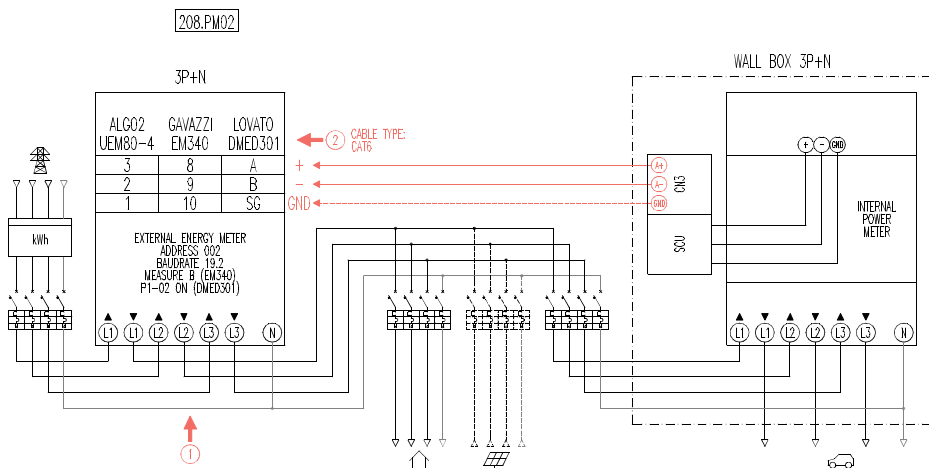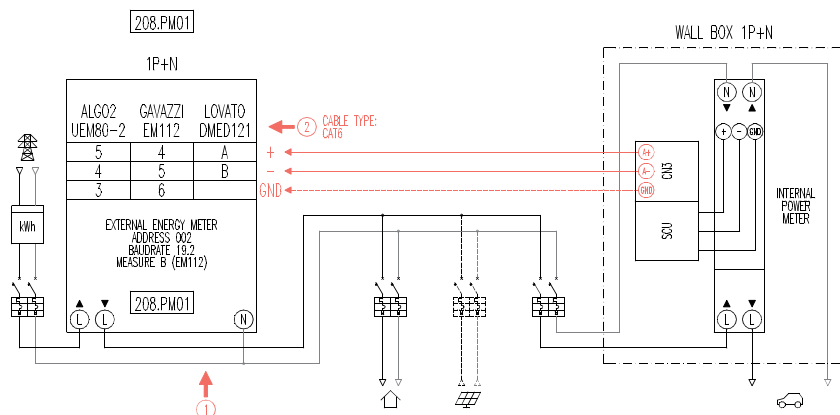

Serie BE-W[2.0] / BE-T / BE-R


BE-R

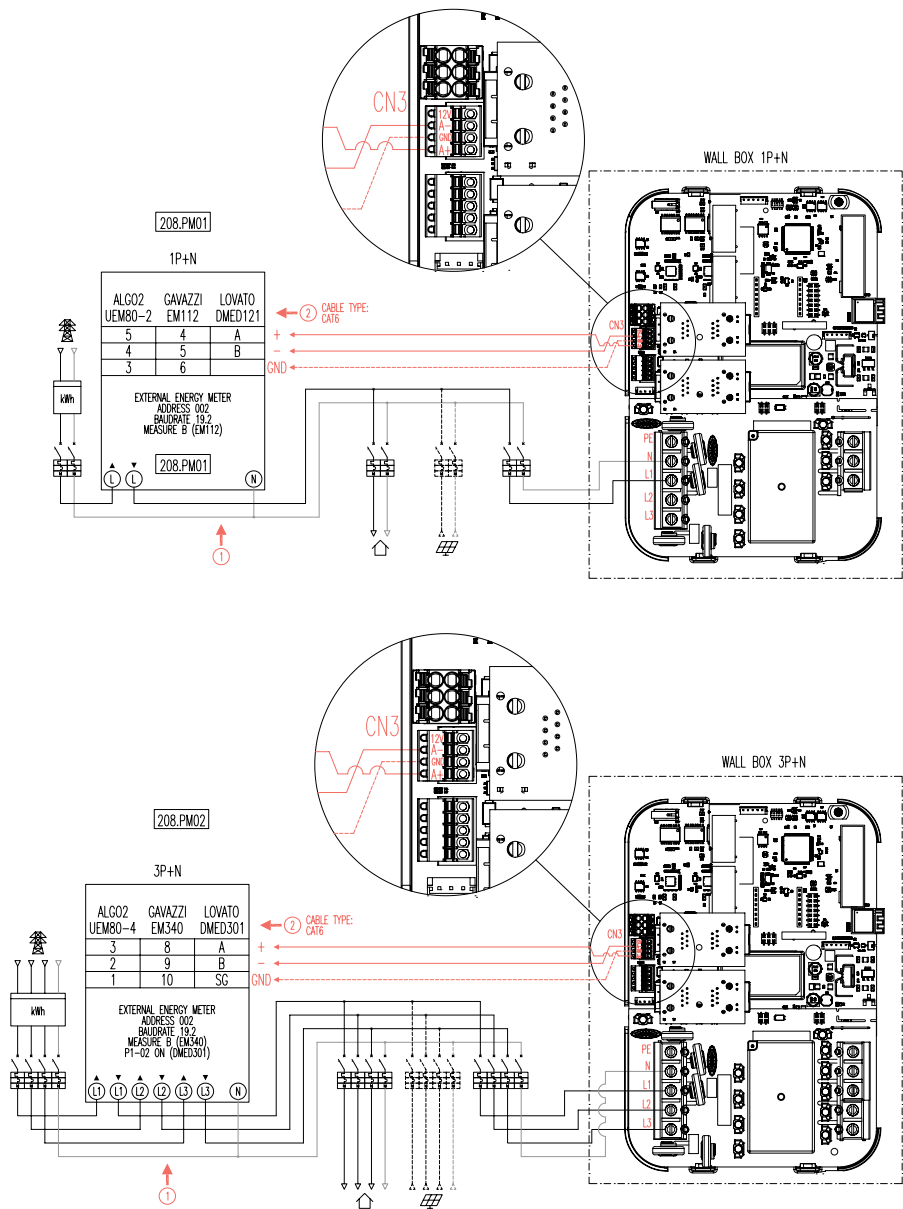

Cod. 208.PM01 - 208.PM02

CONFIGURAZIONE / CONFIGURATION / CONFIGURATION / CONFIGURACIÓN

- 1) Stazioni con pulsante e display
Stations with button and display
Stations avec bouton et affichage
Estaciones con botón y pantalla

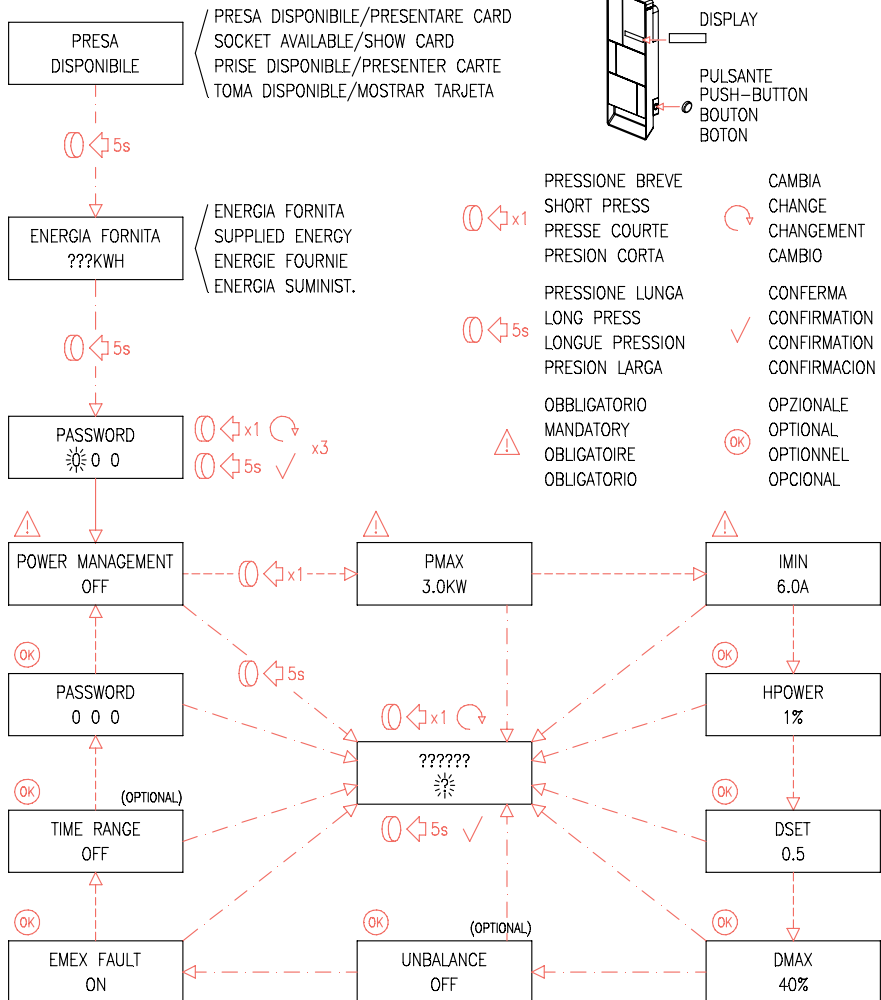

- 2) Stazioni con gestione APP
Stations with APP management
Stations avec gestion APP / Estaciones con gestión APP
Power management ON=tutorial APP



Numero Verde
800-018009
www.scame.com
e-mobility@scame.com

