

BE-M[2.0] Series

User and installation
manual



**READ CAREFULLY BEFORE
USING THE STATION**

**KEEP FOR FUTURE
REFERENCE**

SCAME

CONTENTS

1.	INTRODUCTION	4
1.1	PURPOSE OF THE MANUAL	4
1.2	MANUFACTURER IDENTIFICATION	4
1.3	LAYOUT OF THE MANUAL	4
1.4	LIABILITY AND WARRANTY	5
1.5	SUPPORT	5
2.	SAFETY	6
2.1	GENERAL INFORMATION	6
3.	INFORMATION ON BE-M[2.0] SERIES	8
3.1	COMPLIANCE	9
3.2	FEATURES	10
3.3	OVERALL DIMENSIONS	11
3.3.1	LABEL	12
3.4	SPECIFICATIONS	13
3.5	GRAPHIC INTERFACE	14
3.6	RFID READER	15
3.7	AUTHORISATION VIA OCPP CENTRAL STATION	15
3.8	AUTHORISATION VIA POS CENTRAL STATION	16
3.9	MANUAL STOP BUTTON	16
4.	USING THE CHARGING STATION	17
4.1	STATUS LED INDICATORS	17
4.2	CHARGING PROCESS	18
5.	TROUBLESHOOTING	19
6.	INSTALLATION SITE	21
7.	CONTENTS OF THE PACKAGING	24
8.	INSTALLATION	25

8.1	FOUNDATION	25
8.2	ELECTRICAL PREPARATION	26
8.3	ELECTRICAL INSTALLATION	27
8.3.1	GRID ADJUSTMENT	28
8.4	INSTALLATION	29
8.4.1	CONNECTION OF POWER CABLES	30
9.	CABLE MANAGEMENT (OPTIONAL)	31
10.	CLEANING AND MAINTENANCE	32
10.1	CLEANING	32
10.2	MAINTENANCE	32
11.	DISPOSAL	33

1. INTRODUCTION

1.1 PURPOSE OF THE MANUAL

The object of this user and installation manual is all the versions of the **BE-M[2.0]** series electric vehicle charging station (see chapter 3).

The purpose of this manual is to provide:

- the user with all the information required for the safe use of the station and its maintenance in optimal operating conditions.
- the installer with all the information required to work safely during the installation and commissioning of the station.

1.2 MANUFACTURER IDENTIFICATION

The Manufacturer of the station covered by this manual is:

SCAME PARRE SPA
Via Costa Erta 15
24020 Parre BG - Italy
www.emobility-scame.com

1.3 LAYOUT OF THE MANUAL

This manual is divided into chapters that refer to different topics related to the various phases of the life cycle of the station that are of interest to the end user. Each chapter is divided into paragraphs, each of which deals with specific points of the overall topic to which the chapter refers.

1.4 LIABILITY AND WARRANTY


- The manufacturer's warranty included in the Italia Consumer Code (Articles 128 et seq.) applies to the station and covers the reimbursement, repair or replacement necessary to remedy any manufacturing defects that may occur during standard use for a period of 24 months from the date that the station is delivered.
- Any modifications to the station, or installations and start-ups not compliant with the instructions reported in this manual shall result in the nullification of the warranty and the invalidation of the product certificates.
- The full or partial reproduction of this manual is prohibited without the permission of the Manufacturer.
- The Manufacturer reserves the right to make changes or improvements to the station and documentation without prior notice.

1.5 SUPPORT

For more information on the station and its applications, consult the documentation provided on the website by the Manufacturer by scanning the QR code or visiting the website: e-mobility.scame.com/download.



Please use the contact details below if you need support from the Manufacturer:

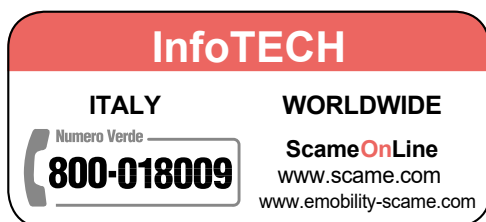

NOTE

The end user is informed that the diagnostic and maintenance operations will be carried out by a technician approved by SCAME who will connect to the devices with credentials provided by SCAME.

2. SAFETY

WARNING



The Manufacturer is not liable for any damage to persons or property if the conditions described in this manual are not respected.

2.1 GENERAL INFORMATION

- This manual contains warnings and instructions that must be followed for the installation, use and maintenance of the charging station and must be available for consultation by authorised personnel.
- The installation and commissioning of the station, as well as maintenance work, must be carried out by qualified and specifically authorised personnel, in compliance with safety standards, regulations and legislation in force.
- The station manufacturer is not responsible for any damage to persons, animals and/or property resulting from failure to comply with the instructions contained in this manual.
- In order to ensure continuous improvement, we reserve the right to make changes to the product and this manual at any time.
- The full or partial reproduction of this manual is prohibited without the prior consent of Scame Parre S.p.A.

DANGER



Risk of electric shock, explosion or electric arc.

- Before performing any operation on the charging station, disconnect the power supply and use appropriate tools to check that the power supply is disconnected from all parts.
- Before putting the station into operation, check that the metal structure is connected to the ground through the green-yellow wire and protect the power line with an automatic safety device and a residual-current device coordinated with the earthing system.
- Before connecting the vehicle, make sure the station is anchored.
- The power cables, sockets and plugs used to connect the vehicle must comply with the safety requirements of current legislation.

Failure to follow safety precautions can result in serious injury and even death.


WARNING**Risk of damage to the station.**

- Do not touch printed circuit boards and use appropriate tools when accessing components/parts subject to electrostatic discharge.
- If the station is damaged, it must not be installed or used.
- Use a damp cloth or a neutral detergent safe for use with plastic for cleaning.

WARNING

avoid immersing the station components in liquid. If the connectors are immersed, do not attempt to recharge them and contact customer support

3. INFORMATION ON BE-M[2.0] SERIES

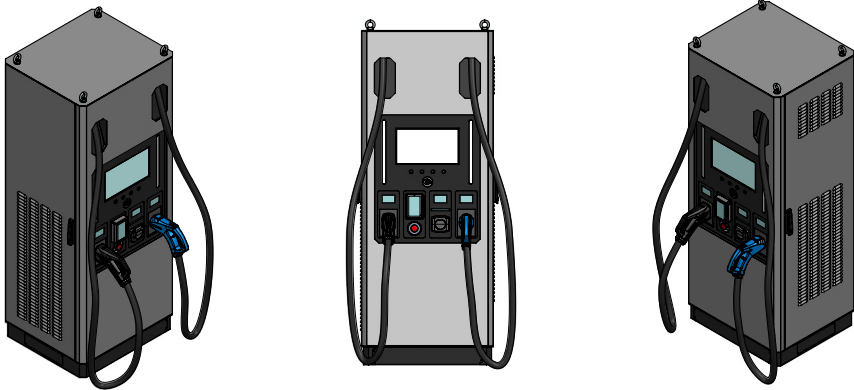




- The EV charging stations of the BE-M[2.0] Series produced by Scame meet the following classification requirements of the IEC/EN 61851-1 standard:
 1. Features of the mains power supply input: EV mains power supply equipment connected to the AC mains power supply network.
 2. Electrical connection method: Permanently connected.
 3. Features of the power supply output: Direct current (CCS2 and/or CHAdeMO) and/or Alternating Current (Type 2) EV power supply equipment.
 4. Standard environmental conditions: Outdoor use.
 5. Operation from -25 C to +40 C (with downgrading up to 55°)
 6. Access condition: equipment for places with unrestricted access.
 7. Assembly method: fixed equipment, floor assembly.
 8. Protection against electric shock: Class I equipment.
 9. Charging mode: Modes 3 and 4.
- The EV charging stations of the BE-M[2.0] Series produced by Scame meet the following classification requirements of the IEC/EN 61851-23 standard:
 1. System structure: insulated direct current EV charging station - reinforced insulation.
 2. System control: regulated DC EV Charging Station - controlled current charging and controlled voltage charging.
 3. System used: System A and/or System C.
 4. Output voltage: over 60 V, up to and including 1500 V.
- The BE-M[2.0] Series EV charging stations produced by Scame use dedicated connectors according to IEC/EN 62196-1 and 3 standards

3.1 COMPLIANCE

The BE-M[2.0] series complies with:

- IEC 61851 Series - Conductive charging systems for electric vehicles (IEC 61851-1, IEC 61851-21-2, IEC 61851-23, IEC 61851-24).
- IEC 61439-7 - Assembled low-voltage switchgear and controlgear assemblies (LV panels, Part 7).
- IEC 62196 Series - Plugs, socket-outlets, vehicle mobile and fixed connectors, conductive charging of electric vehicles (IEC 62196-1, IEC 62196-2, IEC 62196-3).
- CHAdeMO 0.9, 1.0, 1.2.
- CCS2, DIN SPEC 70121.
- RFID, ISO 14443 A/B
- ISO 15118-2 (DC outputs)
- ISO 15118-20 (HW ready for DC outputs)

3.2 FEATURES

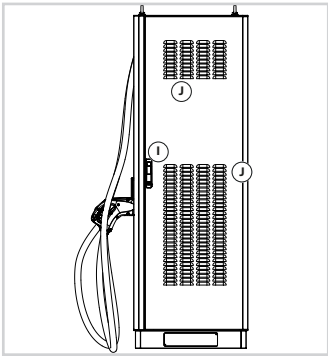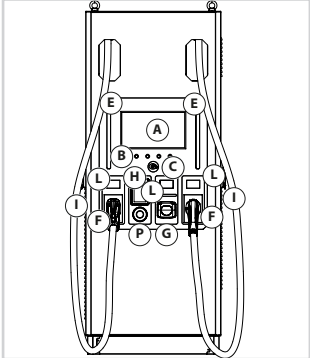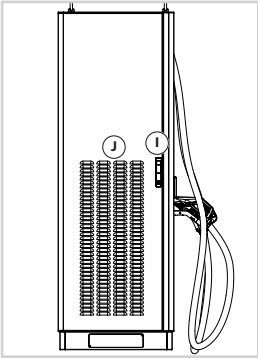
LEFT	FRONT	RIGHT
		
J Air Inlets	P Manual stop button	I Door lock
	A Display	J Air Inlets
	B Buttons	
	C RFID Reader	
	E DC output status LED	
	F DC output	
	G AC output	
	G1 AC output LED	
	L Inspection window for power meter	
	H POS payment terminal	

NOTE


The indications shown above may differ from the equipment purchased depending on the model and options chosen.

3.3 OVERALL DIMENSIONS

W x H x D	735 x 1866 x 640 mm
Weight	300 - 430 kg (varies based on maximum power)

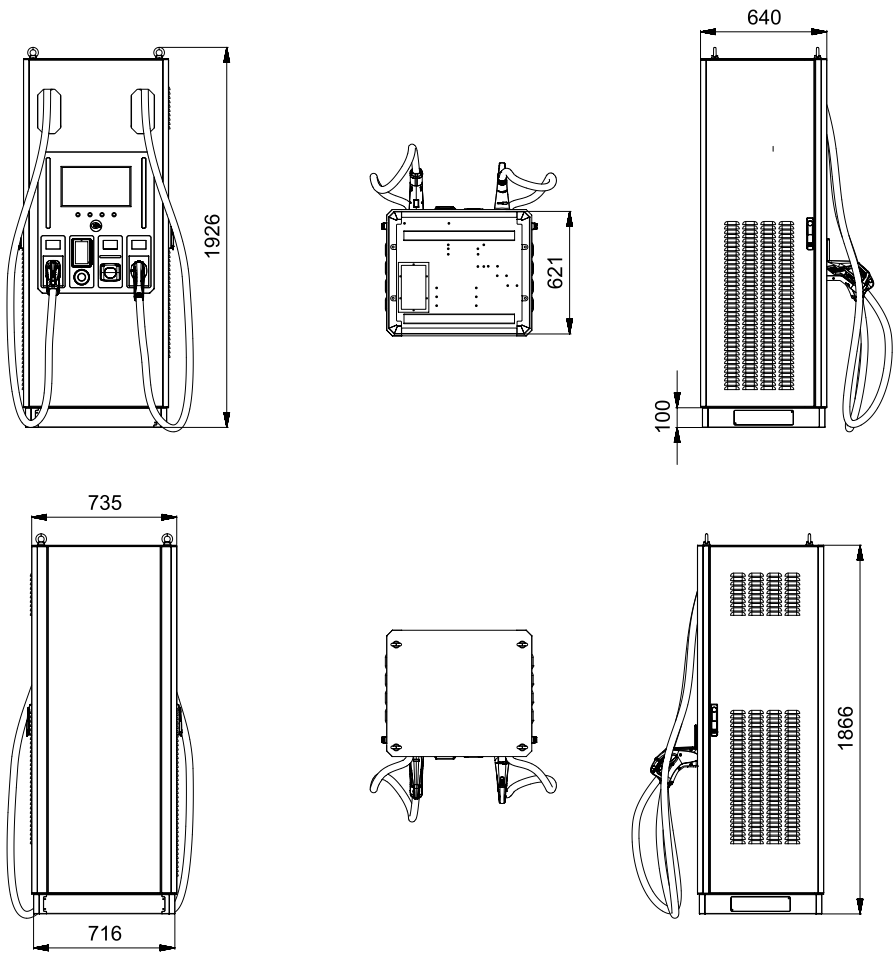

3.3.1 LABEL

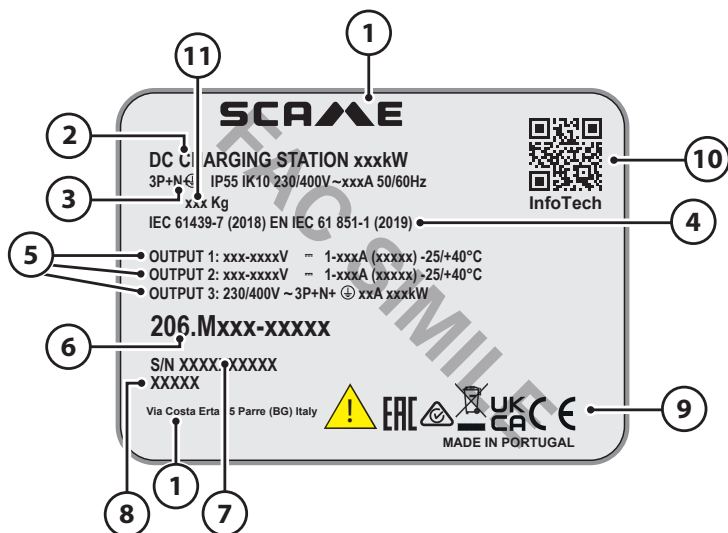

- | | |
|--------------------------|---------------------------------------|
| 1. Manufacturer Data | 7. Serial number |
| 2. Station description | 8. Production date |
| 3. Input technical data | 9. Markings |
| 4. Regulatory reference | 10. QR Code for documentation request |
| 5. Output technical data | 11. Weight |
| 6. Station code | |

3.4 SPECIFICATIONS


Max. POWER kW (No. of modules)	60 (2)	90 (3)	120 (4)	150 (5)	180 (6)
INPUT POWER					
Rated voltage	230/400 V AC ± 10%, 3P+N+PE, 50/60 Hz				
AC Current (DC) (DC+AC)	92A 125A	138A 171A	184A 217A	230A	276A
Power factor	0.99 nominal output				
THD	< 5%				
Efficiency	94% at rated output power				
OUTPUT POWER					
CCS2 DC voltage range	150-1000 V DC				
CHAdEM0 DC voltage range	150-500 V DC				
CCS2 maximum DC current	150A	225A	300A	375A	450A
CHAdEM0 maximum DC current	125A				
DC Voltage Ripple + Noise	500 mVp-p				
DC current ripple (typical)	<1 Arm at rated power (measured with resistive load)				
AC Voltage	400 V (as input voltage) for versions 60/90/120 kW only				
AC current	Three-phase 32 A max for versions 60/90/120 kW only				
AC supply	22 kW max for versions 60/90/120 kW only				
USER INTERFACE AND SYSTEM CONTROL					
DC Output Connector Types	Options: CCS2, CHAdEM0				
AC Output Connector Types	Optional: type 2 with 22kW IEC62196-2 for versions 60/90/120 kW only				
HMI interface	15.6-inch graphic LCD (800x480), control buttons				
Supported languages	Change to "Multi language (max 4 languages)				
Manual stop button	1 manual stop button				
Charging options	A session a simultaneous DC + AC charge DC + DC + AC, 3 simultaneous for versions 60/90/120 kW only				
User authentication	Mifare ISO / IEC 14443 A / B RFID reader Optional: payment terminal				
Network interface	Ethernet, GSM/3G/4G				
Communication protocol	OCPP 1.6 JSON upgradeable, others on request				
Protection	Overcurrent, under/overvoltage, short circuit, earth leakage, overheating, door open				

MECHANICAL AND ENVIRONMENTAL SPECIFICATIONS	
Operating temperature	operation from -25°C to +40°C (With downgrading up to 55°)
Humidity	5% to 90% relative humidity, non-condensing
Altitude	< 2,000 m
Protection rating	IP55 / IK10 according to IEC 62262
Cooling	Forced air
Charging cable length	4.5 m (standard) - max 7.5 m (optional)
Decorative panel	Optional (not included in basic configuration)
Dimensions (WxDxH)	735 x 640 x 1866 mm
Weight (depends on configuration)	approx. 330-430 kg

3.5 GRAPHIC INTERFACE

The main purpose of the graphic interface is to indicate the status of the charging process, i.e. the charging speed, time elapsed and energy consumed (kWh) among other features, it can also display images and/or advertising.

Description of the content displayed on the graphic interface of the BE-M[2.0] series

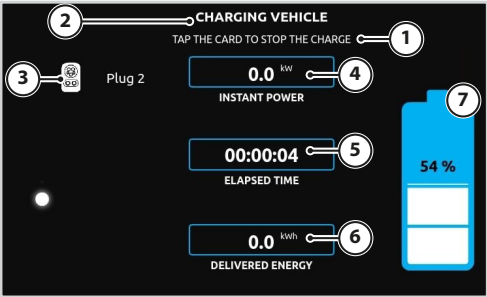


- 1. Action to be taken
- 2. Status
- 3. Connector
- 4. Charging power (kW)
- 5. Time elapsed (min:sec)
- 6. Power output (kWh)
- 7. State of battery charge

3.6 RFID READER

The BE-M[2.0] series charging station is provided with a function to authorise charging via a pre-enabled RFID device (card, key fob, or other form factor).

Note that scanning the RFID device authorises the user for a maximum time interval of 30 seconds, after which it is necessary to proceed with further authorisation.

The figure below indicates the position of the RFID reader for scanning the RFID device.

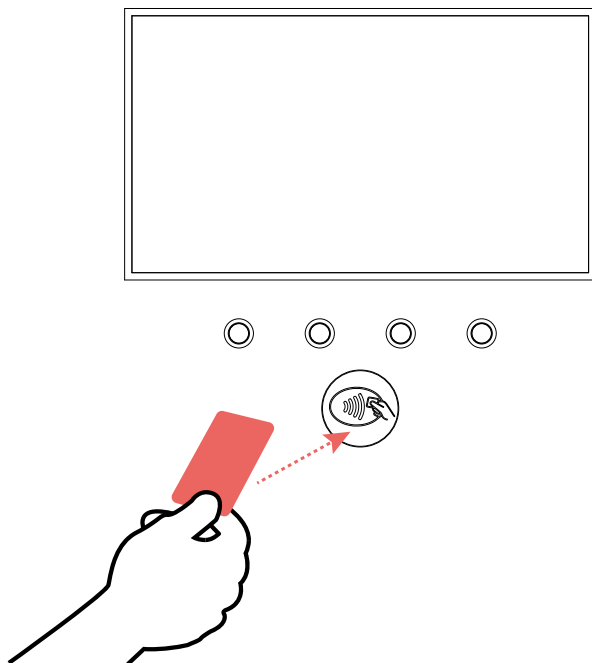

3.7 AUTHORISATION VIA OCPP CENTRAL STATION

The station can be configured to be monitored and controlled by a central station via the OCPP 1.6JSON protocol. In this case, all the typical uses of charging platforms are supported, such as billing, charging point reservation and remote identification through a mobile application.

Note that the registration of authorised users must be carried out on the management platform. Detailed instructions on how to carry out this authorisation must be requested from the administrators of this internet service.

Connecting the stations to a third party central station may require a contract to be signed with the electric mobility service provider and the application of annual subscription fees.

Connect to WEB-UI to configure the OCPP parameters.

3.8 AUTHORISATION VIA POS CENTRAL STATION

The BE-M[2.0] Series charging station can be equipped with a POS payment terminal for the acceptance of payments by credit, debit and prepaid card and to enable the start of electric charging.

3.9 MANUAL STOP BUTTON

Follow the instructions in the figures below if you need to activate the stop button due to a fault/malfunction. This immediately stops the charging process.



the graphic interface will highlight the lock status of the charging station.


4. USING THE CHARGING STATION

4.1 STATUS LED INDICATORS


LED	COLOUR	DESCRIPTION
	-	Off
	Green	Available
	Flashing green	Connected cable and EV detection (quick flashing) or charging process completed (slow flashing)
	Blue	Charging in progress
	Flashing blue	Suspended
	Red	Not available
	Yellow	Connector reserved

4.2 CHARGING PROCESS

With local permission. Alternatively authorisation can also be completed via OCPP

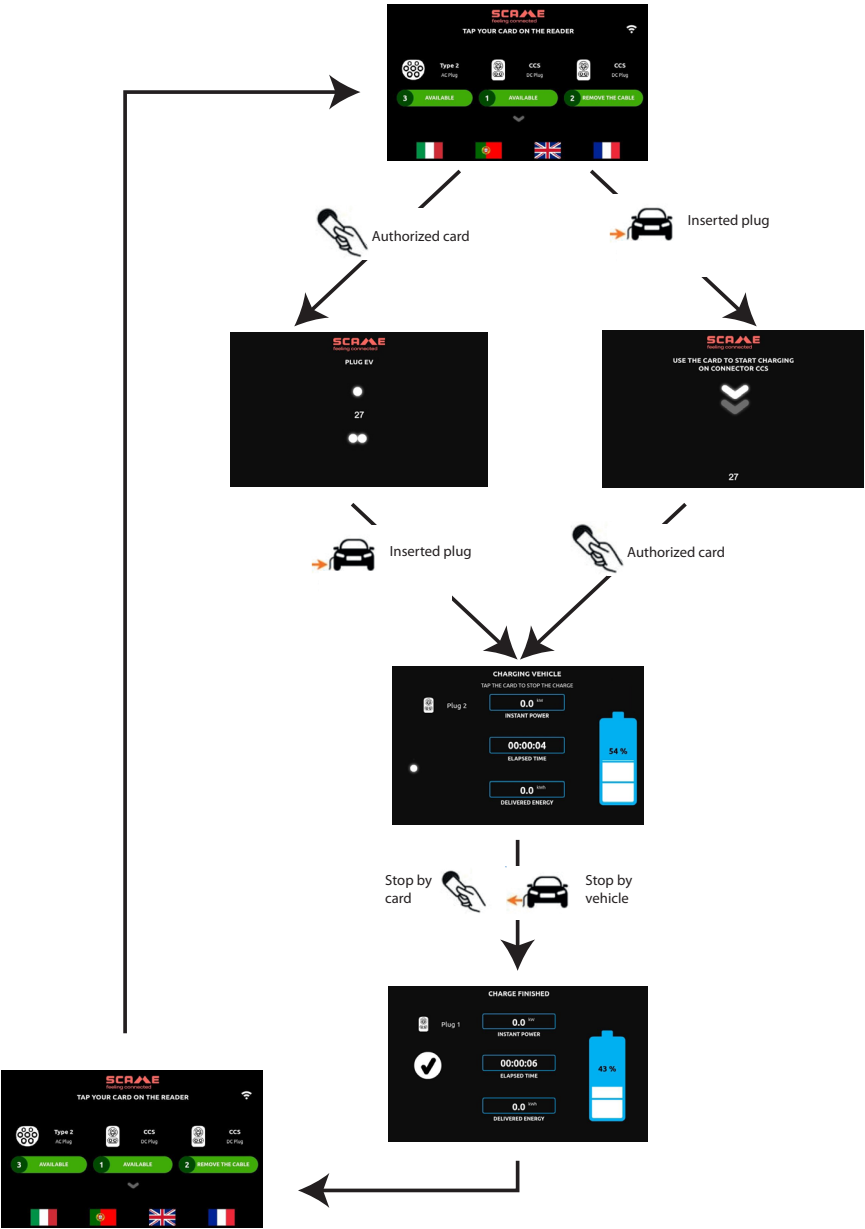

 5. TROUBLESHOOTING

LED INDICATORS		
ERROR	POSSIBLE CAUSE	REMEDY
	No power	Check whether the MCB, in the QG, is ON
		Check if MCBs in the charging station are switched on
		Check presence of 12 V AC aux from wiring diagram
	Faulty LED	Check if the station is powered correctly Contact Technical Support
	EV charging process completed	Check the battery charge status of the electric vehicle
	The charging cable was correctly connected to the vehicle, but the user did not authorise charging via RFID device	Remove the connector from the EV and restart the procedure
	EV charging process paused	Check if the vehicle is in battery vent mode. In this case, wait until the ventilation has finished. Charging will resume shortly afterwards*
	The user has paused the charging process	End the session, remove the connector from the electric vehicle and restart the charging process
	Defect	Turn the charging station switch off and on again (in the main and internal electrical panels) and wait for the LED-S to turn green. Repeat the charging process. If the error persists, contact technical support
	The charging cable is incorrectly connected	Disconnect the charging cable (on the EV side) and reconnect it
	Faulty charging station	Contact Technical Support
	Connector is not inserted correctly	Disconnect the charging cable (on the EV side) and reconnect it
	Charging process not successful	Follow the instructions in the section dedicated to the charging process
	RFID card reading time out	Disconnect the connector, reconnect it and place the RFID card near the reader
	The battery of the electric vehicle is fully charged	Check EV
	Scheduled charging of electric vehicles	Check if the electric vehicle has a scheduled start for charging
	Faulty charging cable	Check that the charging cable is not damaged. If damaged, contact technical support
	Failure to close the access doors to the components	Check that the charging station is closed correctly

LED INDICATORS		
ERROR	POSSIBLE CAUSE	REMEDY
The connector does not disconnect from the power socket	Charging process not completed	Check if the charging station has a flashing green LED-S1/LED-S2/LED-S3 (see 4.1. LED status indicators)
	RFID card not used	Place the RFID card near the RFID reader to complete the charging process and disconnect the connector (see 4.2.). Charging process)
Message - temporarily unavailable	No power	Check whether the protections, in the Charging station and in the QG, are activated
		Check if the station is powered correctly
		Errors may occur when communicating with energy meters
		There may be delayed phase voltages
		There may be a communication error with the charging controller boards
Charging station with no internet connection	Charging station offline	Contact Technical Support
		Turn the Charging Station switch off and on again (in the main and internal electrical panels) and wait for the LED-S to turn green. Repeat the charging process. If the error persists, contact technical support

RFID CARD		
ERROR	POSSIBLE CAUSE	REMEDY
Invalid RFID card	The RFID card is not programmed to access the Charging Station	Contact the charging station operator
	Damaged RFID card	Contact technical support to replace the card
RFID card not detected	Incorrect positioning of the RFID card	Place the RFID card near the reader in different ways
	Defect	Contact Technical Support

6. INSTALLATION SITE

Before installing the Charging Station, check the position of the vehicle in the parking lot, so that the charging cable can reach the charging point/socket.

The installation site of the BE-M[2.0] Series Charging Station must meet the following characteristics:


- The equipment must not be at an altitude higher than 2,000 m above sea level.
- The equipment must NOT be immersed in water or any other liquid.
- The operating temperature should be comprised between -25°C and 40°C (with downgrading up to 55°).

Installation of the BE-M[2.0] Series Charging Station requires the following construction work:

- Three phase + neutral + protective earth connections.
- Solid foundations.
- Electrical cable sheaths, between QG and BE-M[2.0] Series (these sheaths are usually installed below the ground level).
- Parking space for electric vehicles.

The Charging station should be positioned so that the various EVs can access the equipment and there should be vacant space around the equipment, with the minimum dimensions indicated below

BE-M[2.0] SERIES

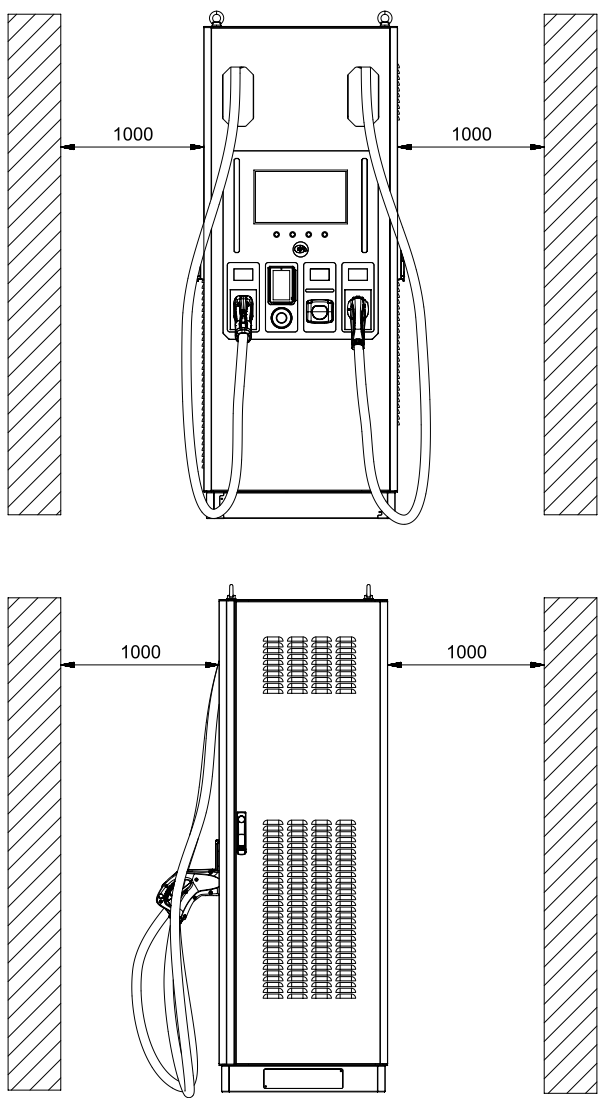

NOTE

The installation of barriers/poles between the BE-M[2.0] Series and the parking lot is recommended to protect the charging station from collisions.

NOTE

If the charging station is likely to be exposed to direct sunlight and high ambient temperatures for most of the day, it is advisable to install protection from direct sunlight.

NOTE

Consider the following recommendations to prevent acts of vandalism and/or theft:

Installation of the charging station in a place where it can be clearly monitored.

Use of security check (24 hours a day).

Installation of sufficient lighting around the charging station.

7. CONTENTS OF THE PACKAGING

- Packaging
- Pallet
- Keys
- RFID cards
- Wiring diagram
- Safety instruction sheet

NOTE

Whenever possible, the BE-M[2.0] Series Charging Station should be unloaded at the place of installation and operation. If it is unloaded in a temporary place for storage, do not remove the packaging and store it, respecting the following minimum requirements:

- **Safety - the BE-M[2.0] series charging station must be protected from adverse elements such as heat radiation, direct sunlight, mechanical damage, contact with organic solvents, etc.**
- **Temperature - for temperatures below -25°C and above +50°C, special attention should be paid to storage and handling.**
- **Environment - the BE-M[2.0] Series Charging Station must be stored in a dry and dust-free place. The distance from any heat sources must be at least one metre. Avoid storing the station outdoors.**


8. INSTALLATION

8.1 FOUNDATION


In the case of reinforced concrete foundations, the concrete application and curing times must be observed in accordance with the applicable regulations. Consequently, the concrete must be chosen and prepared with care to avoid contamination by other types of soil.

The following figure indicates the base dimensions of the BE-M[2.0] Series Charging Station, which must be considered when constructing the concrete foundation.

Front area of the charger

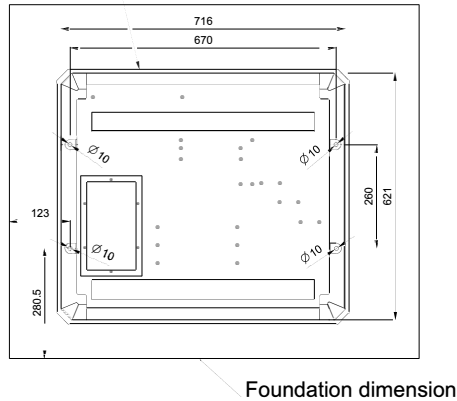


The following figure indicates the base dimensions of the BE-M[2.0] Series charging station and 208.AP84 clamp irons fastener kit.

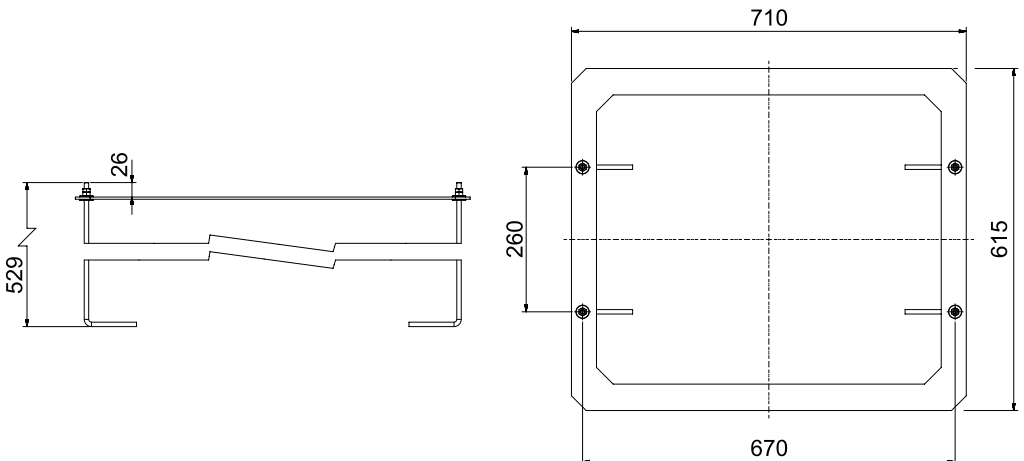

8.2 ELECTRICAL PREPARATION

The following structural works are required for the installation of the BE-M[2.0] Series charging station.

- The depth at which the pipes are buried must comply with local technical regulations for low voltage electrical systems, therefore the cables must be buried in the standard ground at least 600 mm below the surface.
- This distance must be increased to at least 1000 mm in the crossings of vehicle access points and to a length of 500 mm on each side of these access points.
- When choosing the area in which to install the charging station, an area of 700 mm and 1000 mm (respectively) must be reserved for access all around the product, as indicated.

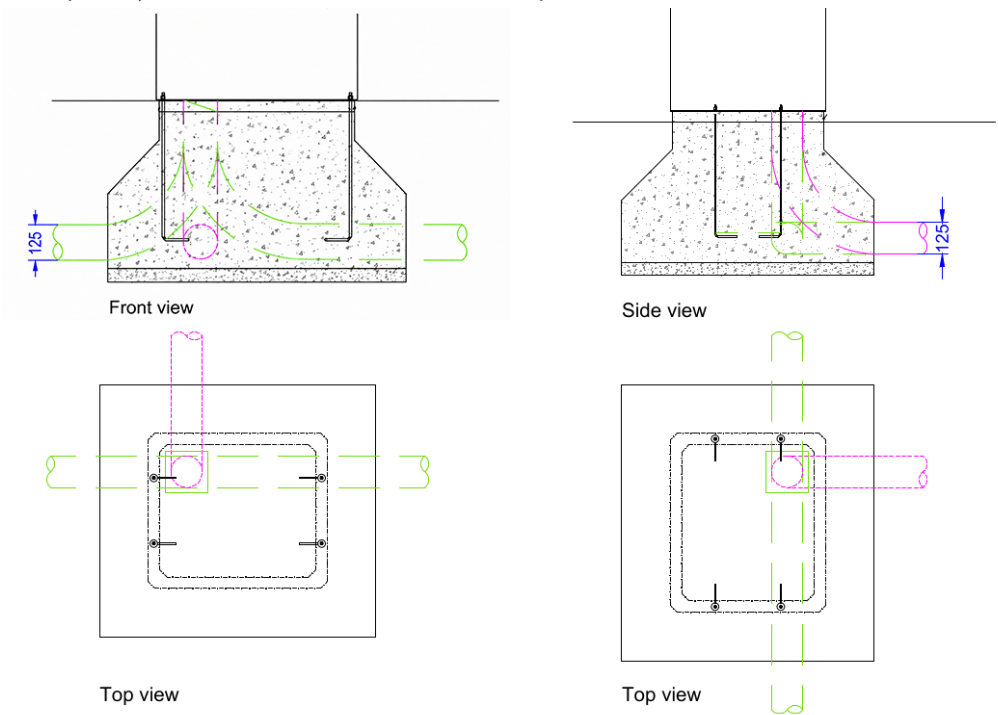

NOTE

The corrugated piping designed for the through-passing of the cables should be suitably sealed using foam, so as to ensure protection against infiltration and external agents

8.3 ELECTRICAL INSTALLATION

The following prerequisites must be verified for installation. Values outside these ranges can adversely affect the performance of the charging station:

- Three-phase power distribution system + PE
- Earthing system TT, TN(S), TN(C)
- Phase-to-phase voltage (L-L) 260 V AC ~ 530 V AC
- Phase to neutral voltage (L-N) 150V AC ~ 306V AC
- Neutral to ground voltage (N-PE) less than 5 V AC
- 50 or 60 Hz frequency (f), depending on the local grid code
- Earthing resistance less than 50 Ω
- Three-phase imbalance (difference between maximum and minimum voltages between phase and neutral) 10V or less

NOTE

The metal structure of the BE-M[2.0] Series Charging Station must be connected to an earthing circuit.

WARNING



In the event of a fault where the earth conductor loses electrical continuity, a contact current > 3.5 mA AC RMS is possible.

BE-M[2.0] SERIES

8.3.1 GRID ADJUSTMENT

The BE-M[2.0] series Charging station can be connected directly to the electricity grid or to a customer's electricity distribution panel according to the instructions of the electrical system designer.

NOTE



The power supply line must be designed with cable cross sections suitable for the load and have adequate protection installed upstream. If required by local regulations, a type B residual current device (RCD) or an equivalent protection device against direct differential currents must be used. A nominal differential current of 300 mA is recommended. The designer of the electrical system is the only person in charge of sizing the power line.

NOTE


Always mind the distance between QG and the charging station. The wire gauge must be calculated with a maximum voltage drop of 3%.

8.4 INSTALLATION


1. The 4 holes in the base must be opened to position the threaded rods (using metal bolts or a chemical hardener).
The threaded rods (M10) must be 500 mm below the foundation.
2. Place the charging station on the base.

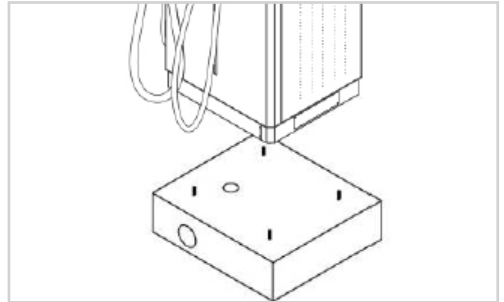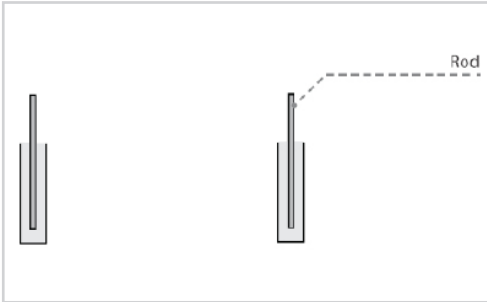

3. Remove the right and left metal grids.
4. Apply the nuts and tighten them.

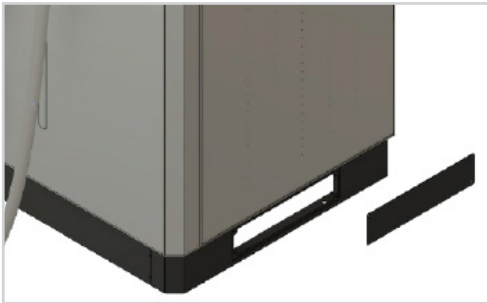

5. Put the grids back in place.

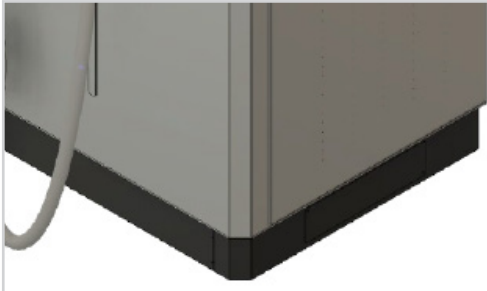

8.4.1 CONNECTION OF POWER CABLES

The station will be equipped right from the origin with the circuit breakers fitted.


The installation sequence is as follows:

1. Open the door of the charging station;
2. Drill the plate at the base of the station and pass the power cables through a cable gland of appropriate dimensions;
3. Remove the circuit breakers of the switch provided with the supply;
4. Apply the heat shrink sheath on the power cables, ensuring that they adhere fully, and connect to the terminals of the switch, complying with the correct sequence of the tightening steps recommended by the manufacturer;
5. Refit the circuit breakers on the switch;
6. Verify whether:
 - No active part of conductor protrudes from the circuit breakers;
 - The cables are correctly positioned and without mechanical tensions.

9. CABLE MANAGEMENT (OPTIONAL)

As optional accessory, the charging station can be equipped with a cable support and management system (Cable Management), identified by the name 208.AP66.

Such system is designed to support and correctly organise the charging cables, reducing the risk of folding, wear or inadvertent damage, and contributing to maintaining order and safety in the installation area.

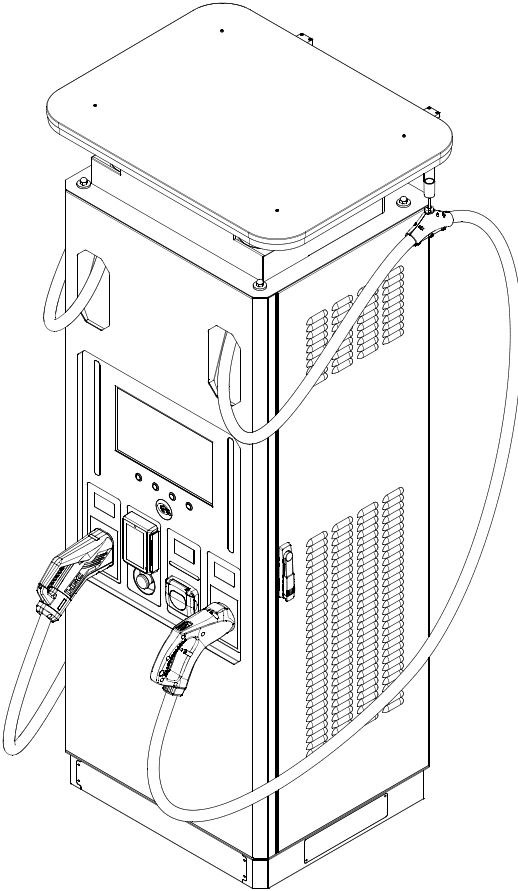

10. CLEANING AND MAINTENANCE

10.1 CLEANING

Use a damp cloth or a neutral detergent safe for use with plastic for cleaning the station.

After charging the vehicle, take care to store the connector in the appropriate support to prevent external agents from depositing on the charging socket.

NOTE

Clean the filters every six months

10.2 MAINTENANCE

WARNING



The charging station is an electrical panel to all extents. Maintenance shall be carried out by qualified and authorised personnel only.

All components of the equipment (i.e. connector and charging cable, buttons, LEDs) and inside the station must be checked for damage, defects or faults every six months (visual inspection).

- To ensure proper maintenance of the charging station, follow the instructions below:
- Always keep the outside of the equipment clean.
- Use a soft, damp cloth for cleaning. For stubborn dirt, use a mild, solvent-free, non-abrasive cleaner.
- Always store the connectors in their respective holders.
- If the equipment is damaged, contact the equipment supplier.
- Replace the ventilation filters regularly (authorised personnel).

NOTE

Before opening the front door of the charging station, turn off the power from the main switch to avoid the risk of electric shock or injury.

Do not remove or bypass the envisaged protection devices.

11. DISPOSAL



“Implementation of Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)”, relating to the reduction of the use of hazardous substances in electrical and electronic stations, as well as waste disposal”.

The crossed-out wheeled bin symbol on the station or its packaging indicates that the product must be disposed of separately from other waste at the end of its life.

The user must then dispose of discarded stations at appropriate separate collection centres for electrical and electronic waste.

For more details, please contact your local authority.

Proper separate collection of the stations for subsequent recycling, treatment or environmentally sound disposal helps to prevent harm to the environment and human health and promotes reuse and/or recycling of the station materials.

NOTE

The improper disposal of the station or its parts by the user will result in the application of administrative penalties provided for by the laws in force in the country where the station is disposed of.

SCAME

InfoTECH	
ITALY	WORLDWIDE
Numero Verde 800-018009	ScameOnLine www.scame.com www.emobility-scame.com



SCAME PARRE S.p.A.
Via Costa Erta 15
24020 Parre (BG) - Italy
TEL. +39 035 705000
emobility-scame.com